

DuPont™ Kalrez® MS220

Perfluoroelastomer Parts

Product Description

DuPont™ Kalrez® MS220 perfluoroelastomer parts are designed for chemical processing and mechanical seals applications where superior chemical resistance and low compression set are critical for successful sealing performance. Kalrez® MS220 continues the DuPont tradition of providing high value in use perfluoroelastomer parts to extend equipment mean time between repair (MTBR), while offering an excellent combination of properties (resistance to steam, acids and bases) at temperatures up to 230 °C (446 °F). It is an effective alternative to other general purpose competitive perfluoroelastomers (see table 2) and is the product of choice for high volume O-rings.

Table 1: Typical Physical Properties

Color	Black
Maximum Application Temperature ² , °C (°F)	230 (446)
Durometer, Shore A ³	76
100% Modulus ⁴ , MPa (psi)	6.93 (1005)
Tensile Strength at Break ⁴ , MPa (psi)	15.93 (2310)
Elongation at Break ⁴ , %	154
Compression Set ⁵ , 70 hr at 204 °C (400 °F)	24
Low Temperature Sealing ² , °C (°F)	-14 (6)
Linear Coefficient of Thermal Expansion ² , / °C (/ °F)	3.85 x 10E-4 (2.14 x 10E-4)

¹ Not to be used for specification purposes

² DuPont proprietary test method

³ ASTM D2240 (plied sheet test specimen)

⁴ ASTM D412, 500 mm/min (AS568 K214 O-ring test specimens)

⁵ ASTM D395B (AS568 K214 O-ring test specimens)

Chemical Resistance

Integrity of seal properties is closely associated with low elastomer swell. Excessive swell may cause seal damage, extrusion, leaks and other failures due to equipment malfunction. Assuming proper seal design, low volume swell can be a reliable predictor of elastomer seal performance in mechanical seal applications.

The following data is the result of lab compatibility testing to determine the volume swell of Kalrez® MS220 parts when exposed to various fluids. The chemicals represent some of the most aggressive substances in industrial applications. Additional physical property testing may be needed to further define product performance. Because every application is unique, it is strongly recommended that immersion testing be performed in the actual composition of the process fluids.

Table 2:
Comparison of Volume Swell* (% Change) between DuPont™ Kalrez® MS220 FFKM and nearest competitive FFKM after 672 hours immersion


Fluid	Temperature °C (°F)	MS220	Nearest competitive FFKM A-1
Steam	225 (437)	A	NR
Nitric Acid (70%)	85 (185)	A	C
Butyraldehyde	70 (158)	B	B
Sulfuric Acid (96-98%)	150 (302)	A	C
Glacial Acetic Acid	100 (212)	A	A
Ammonium Hydroxide	100 (212)	B	B
Ethylenediamine	90 (194)	C	C
1,2 Dichloroethane	100 (212)	A	NR
Methanol	100 (212)	A	NR
Toluene	100 (212)	A <td A	
HCFC	25 (77)	A	NR

*AS568 K214 O-ring test specimens.

Volume swell rating: A= 0-10%, B= 10-20%, C= >20%, NR= No Rating Available

Thermal Resistance

One method of predicting heat resistance is compression set. This is defined as the percentage by which a standard test piece (typically an O-ring or a pellet) fails to return to its original thickness after being subjected to a standard compressive load or deflection and temperature for a fixed period of time. This chart shows some elastomer comparisons with regard to compression set resistance (ASTM D395 Method B).

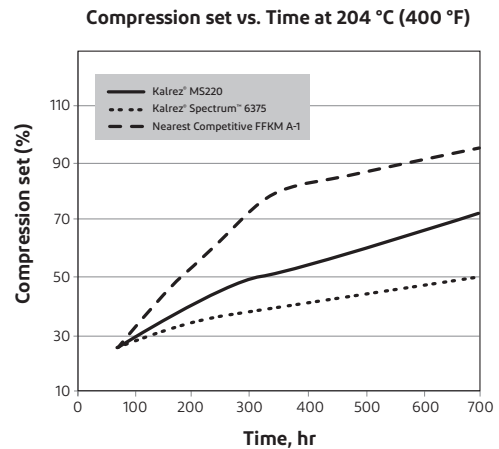

Visit us at Kalrez.com

The information set forth herein is furnished free of charge and is based on technical data that DuPont believes to be reliable and falls within the normal range of properties. It is intended for use by persons having technical skill, at their own discretion and risk. This data should not be used to establish specification limits nor used alone as the basis of design. Handling precaution information is given with the understanding that those using it will satisfy themselves that their particular conditions of use present no health or safety hazards. Since conditions of product use and disposal are outside our control, we make no warranties, express or implied, and assume no liability in connection with any use of this information. As with any product, evaluation under end-use conditions prior to specification is essential. Nothing herein is to be taken as a license to operate or a recommendation to infringe on patents.

CAUTION: Do not use in medical applications involving permanent implantation in the human body. For other medical applications, discuss with your DuPont customer service representative and read Medical Caution Statement H-50103-3.



DuPont™, the DuPont Oval Logo, and all products, unless otherwise noted, denoted with ™, sm or ® are trademarks, service marks or registered trademarks of affiliates of DuPont de Nemours, Inc. © 2022 DuPont. All rights reserved.

Form No. KZE-A11073-00-D0122
 Rev. 0, March 2022